



The box includes

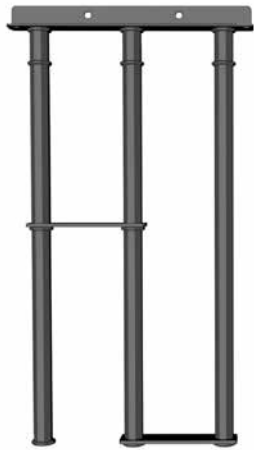

A Upper part (1 piece)

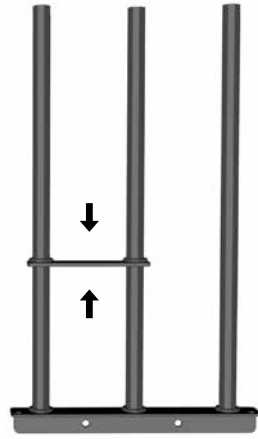

B Lower part (1 piece)


Make sure to place the wide tube (A) on top, to avoid leakage.

C Optional screed 7.4" with .8" hole



1 piece

D Security screws




4 pieces

E Flat lag screw 6 X 3/4



5 pieces

F Plastic wall anchors 3/8"

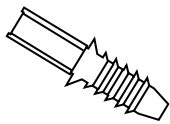

4 pieces

G Labels



4 pieces

H Plugs




6 pieces


*Note: These bars can be installed in outside or inside of each room, taking into account the window opening.

Installation


- 1 Measure the window and identify how many modules you need.
*Note: That each module is 16 inches wide. Visit our website to confirm number of modules required depending on the length of each window.

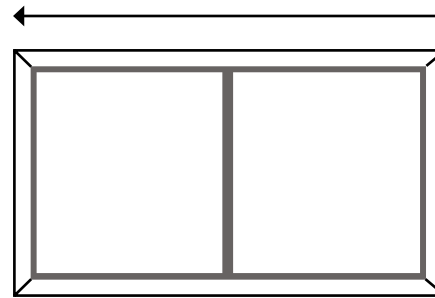


- 3 Place the optional mobile reinforcement-screed and donut (C) wherever you prefer and set it with the setscrew.

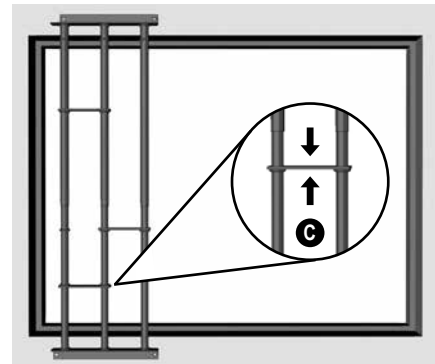



- 2 Mark and drill holes

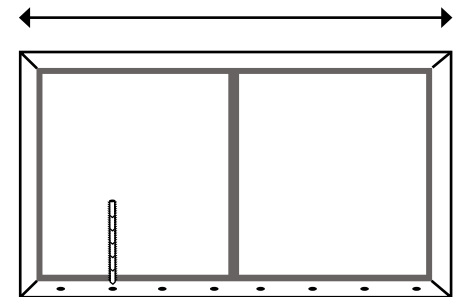


- 4 Expand the bar to the required height and hold with the setscrew.

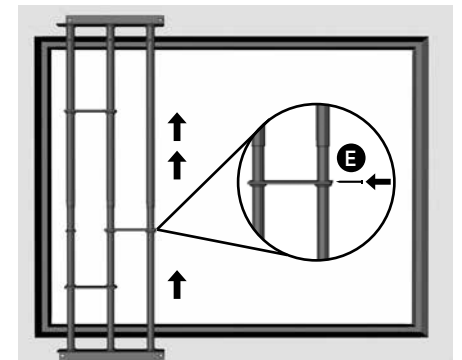


⑤ Set module (s) using anchors and security screws.

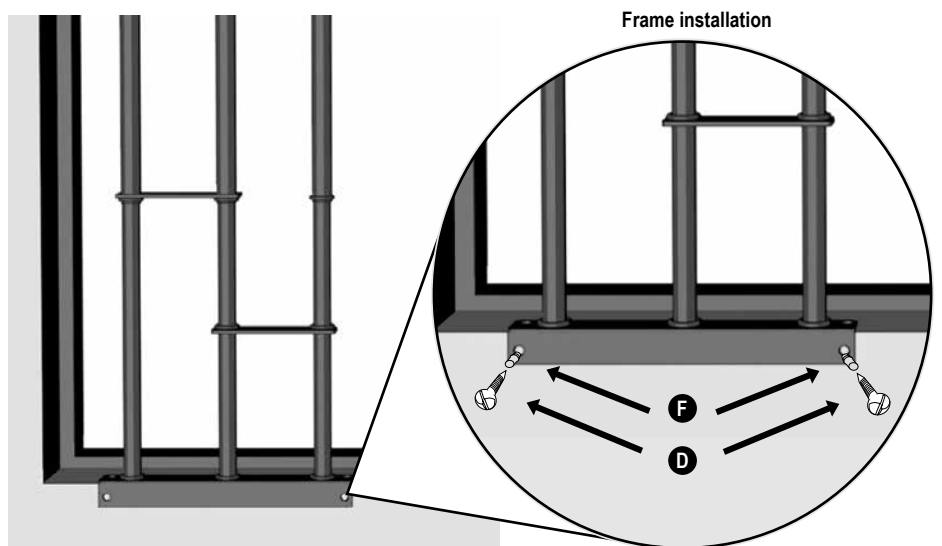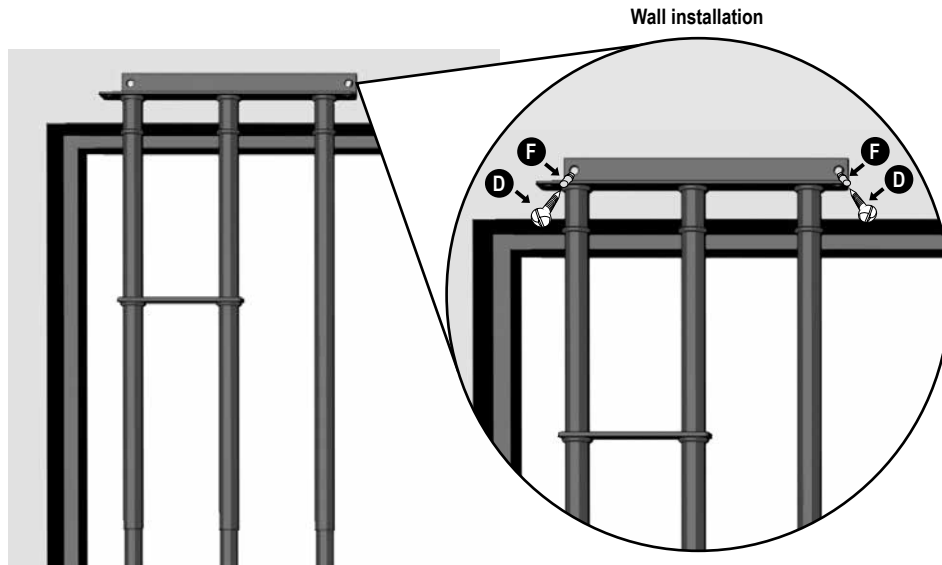

There are two ways to install the reinforcements

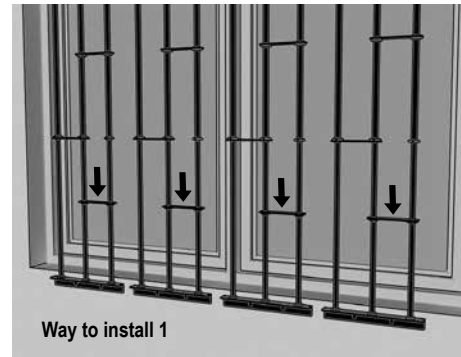


Installing the reinforcement in the module.

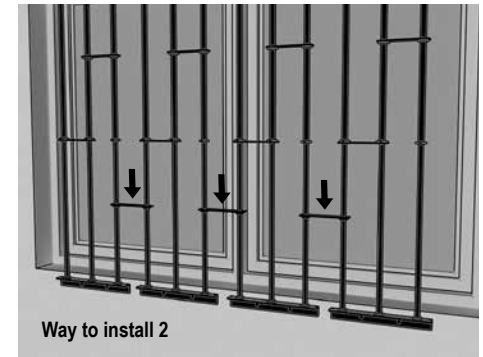

Installing the reinforcement to join one module to the next.

⑥ Installation finished

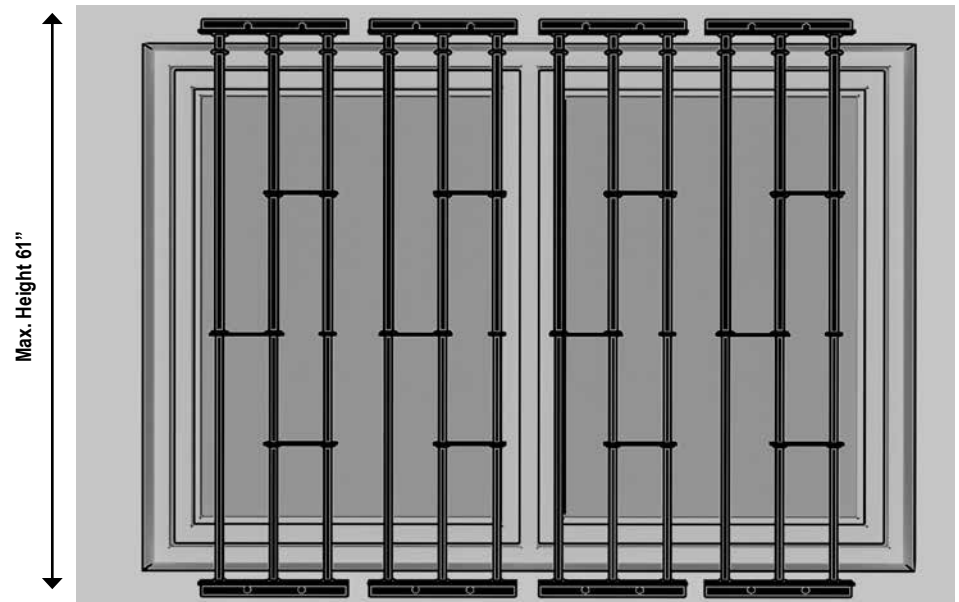

Safety Information: Please read and understand this entire manual before attempting to assemble, operate or install the product.
IMPORTANT: Consult local building and fire codes before installing window bars, as they may not be compliant in all areas.